## BAROS • M House Dust Mite Allergen Test Kit User Manual

• Package: 2 kits / box

● Storage: 1~30°C


• Expire date: 2 years from production

## House Dust Mite Allergen Test Kit

Detection within 10 minutes | Simultaneous detection of 2 groups of dust mite allergen | Dot type strip for easy analysis

Please read the manual carefully before using this test kit.

BAROS-M House Dust Mite Allergen Detection Kit detects major house dust mite allergens (Der f1, p1 / Der f2, p2) that can cause allergies in places where dust mites are expected to exist, such as beds, blankets, sofas and carpets. This detection kit can detect both European and American house dust mite allergens, and it has excellent detection sensitivity by using a specific antibody. In addition, results can be checked within 10 minutes and can be easily determined.

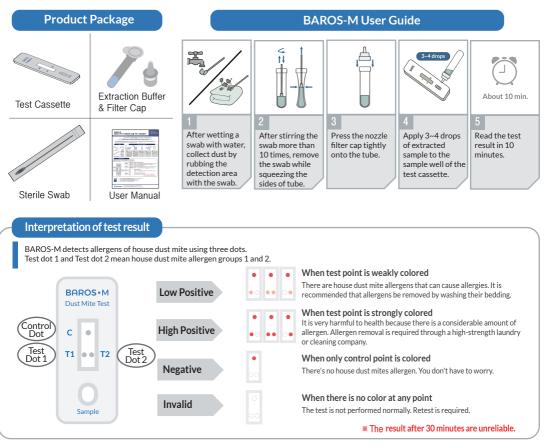

## Caution



- 1. This product cannot be used for any purpose other than to detect house dust mite allergens.
- 2. Keep out of reach of children and infants.
- 3. Check the use-by date, damage or deterioration before using.
- 4. Conduct the test on a flat surface, and hold the buffer tube vertically and drop it slowly.
- 5. Results after 30 minutes are unreliable.
- 6. Look closely at the test cassette in a bright place.
- 7. People who have difficulty distinguishing colors or have low vision are difficult to check results.



(04785) #405, Sungsu A1 Center 48 Ttuckseom-ro 17-ga-gil, Seongdong-gu, Seoul, Korea Ebiogen Inc. / Registration No.: 105-87-04734 Tel : +82-2-3141-0791 / E-mail : baros@e-biogen.com www.barosgen.com / www.e-biogen.com